AMP.

SOFT DOWN STAY NSDX-10/10E (R/L)K INSTALLATION INSTRUCTION



Center of gravity (Density = 0.5) Door height

Door thickness (20mm)

- Please read this instruction sheet carefully for proper installation and operation. Incorrect installation and improper use of the product may damage the unit or cause injury.
- This stay is designed for furniture or lightweight door and is equipped with a damping function.
- Sugatsune guarantees the quality of this product as for all its parts. It cannot however guarantee the final assembly as a whole.
- This product was manufactured and delivered with our utmost care. Should you however find any defect, please contact your dealer immediately.
- Sugatsune warrants that this product is free from defect for a period of one (1) year from the date of delivery.
- Sugatsune liability is limited to the replacement of this product by a similar one free of defect. In no case does this extend to the replacement of the installation or the cabinet as a whole.
- Please keep these instructions at hand for future use.
- Sugatsune cannot be held liable for any damage or injury caused by improper use or one different than the one this product was designed for

CAUTIONS Any failure to observe the following precautions may result in personal injury or damage to the cabinet

 
- Make sure that installation position and specifications are followed. Unsuitable installation position may damage the mechanism when in case two stays are used together. Make sure that the arm of the stay is parallel with the side panel of the cabinet.
- Please don't place any item / load on the cabinet doors during in the open position. Also please make sure to use a support for the door / flap while doing installation.
- This product is designed to operate at room temperatures between 0°C to 40°C (32F-104F).
- Please avoid forced opening beyond the opening angle, and using excessive force while opening the door. This product has a spring at the elbow section. Please be careful not to get your fingers caught in elbow section while you are handling the unit.
- Performance of hardware will be affected by unique factors in each application. Hardware must be tested in intended application to confirm the function.
- It is necessary to periodically check the fixing screws for loosing. Tighten the loosed screws as required.
- Do not force the door to close faster. It can cause damage to the product or hinge(s)
- Please make sure to check the operation after installation

■ Model (For standard screw)


Item No.	Position	Suitable screw on stay	Suitable screw on mounting plate
NSDX-10LK	Left	φ3.5 × 3	φ3.5 × 3
NSDX-10RK	Right	φ3.5 × 3	ф3.5 × 3

■ Model (For Euro screw)

Item No.	Position	Suitable screw on stay	Suitable screw on mounting plate
NSDX-10ELK	Left	φ6.2 × 2 φ3.5 × 1	φ3.5 × 3
NSDX-10ERK	Right	φ6.2 × 2 φ3.5 × 1	φ3.5 × 3



NSDX-10

 

MEASURE

Drop Hinge (SDH-001) 81+S

for drop hinge (s).

bottom board.

STANDARD MOUNTING PLATE

Drop Hinge (SDH-P)

Single knuckle hinge

MEN1

В

91

88

99

Α

79+S

90

The distance of A. B. C are measured

In the case of a drop hinge, dimension

Note: "S" dimension is the overlay distance

from the center of the butt hinge.

A indicates the door end and dimension B, C the top surface of the

C

107

104

115

BOARD

SIDE

APPLICABLE DOOR WEIGHT AND SIZE

This product must be applied to a door with specific weight and size. Lined Section on the right of the graph indicates applicable door weight range based on 1 unit per door. Note-1: In case of 2 units (right & left) per door are used

Door Width can be twice as large, if the door height remains unchanged

Note-2: In case of different door thickness or specific gravity, door weight must fit with following formula.

*1 unit per door: MIN.~MAX.

1/2 door height [m] \times door weight [kg] \times 9.8 = 1.96 \times 6.86 [N \times m] (20 \times 70 [kgf \times cm]) (1/2 door height [inch] \times door weight [lb] = 17 \times 60 [lb \times inch])

*2 units (right & left) per door: MIN.~MAX. 1/2 door height [m] \times door weight [kg] \times 9.8 = 3.92 \sim 13.72 [N \cdot m] (40 \sim 140 [kgf \cdot cm]) (1/2 door height [inch] x door weight [lb] = 35 ~ 120 [lb · inch])

CLIP MOUNTING PLATE

STANDARD MOUNTING PLATE 11.0

(specific gravity approx. 0.5)

100 200 300 400 500 600 700 800 900 1000 1100 1200 1300 1400 1500 1600

Door width (mm)

*In case of usual wooden flap of 20 mm thickness

D

11.8

Door height (mm)

800

700 600

500 400

Above drawing shows for NSDX-10LK (left hand side mounting) and NSDX-10RK (Right hand side mounting) symmetrically. Same mounting position is to be applied to the model of 10 EURO (type with EURO screw). Make a preparatory hole, Before drilling a f6.2 EURO screw.

Hinge Type

NSDX-10 INSTALLATION PROCEDURE

- 1. Mount the body and arm fixing plate on sideboard and back of door with tapping screws (\$\phi 3.5) to oval holes temporarily.
- . Align notch on mounting plate and hole on arm by rotating the stavs to fix them.
- 3. Check the function and adjust mounting plate on oval holes. Then fix them with the tapping screws in the round holes of the stay and mounting plate.

NSDX-10E INSTALLATION PROCEDURE

- Mount the stay on sideboard by applying EURO screw (\$\phi 6.2) to the larger round holes on the body
- 2. Mount the arm fixing plate on back of door with tapping screws (\$ 3.5) to the oval holes temporarily
- 3. Align notch on mounting plate and hole on arm by rotating the body to fix them.
- 4. Check the function and adjust mounting plate on oval holes. Then fix them with the tapping screws in the round holes of the body and mounting plate.
 - *The side board must be strong enough for NSDX installation.

Mounting plates are available both in standard and clip type. When using a standard mounting plate type, be sure to fix it securely with supplied truss screw after installing the stay. When using a clip mounting plate type, be sure to insert arm completely.

⚠ CAUTIONS

In using a clip mounting plate type, be careful not to hit the arm or apply excessive force, as it may cause the arm to fall off and cause

unexpected injury SPEED ADJUSTMENT

Upon completion of installation, make sure the door opens and closes properly. To adjust the opening speed of door, turn speed adjustment screw. In case 2 units (right & left) are used on a single door, the speed adjustment screws on both sides must be turned evenly.

⚠ CAUTIONS

Do not turn the speed adjustment screw exceeding the limit.

SUGATSUNE KOGYO CO.,LTD. Tokyo, JAPAN Phone: +81 (0)3 3866 2260 E-mail: export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LTD.

Reading,UK Phone: +44 118 9272 955 E-mail: sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900

E-mail: info@sugatsune.eu

SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA Phone: +91 22 28314490/91 E-mail: sales@sugatsune.in

SUGATSUNE SHANGHAI Co., LTD. Shanghai, CHINA Phone: +86 21 3632 1858 E-mail: lamp@sugatsune.com.cn

MOUNTING PLATE

Guangzhou, CHINA

Phone: +86 20 6639 3552 E-mail: lamp@sugatsune.com.cn

DOOR Hinge center Door end (Single knuckle hinge) (Drop hinge) SPEED ADJUSTMENT SCREW FASTER SLOWER TAPPING SCREW CLIP MOUNTING PLATE SIDE **BOARD** TAPPING SCREW DOOR

SUGATSUNE AMERICA, INC. California, USA Phone: +1 310 329 6373

E-mail: sales@sugatsune.com

truss screw

Chicago, USA Phone: +1 312 461 1081 E-mail: chicagoshowroom@sugatsune.com

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.