
TORQUE HINGE Installation Instructions Posignies.

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.


Item Code	Item Name	Torque working Direction	Torque
170-032-969	HG-TQJ100-A	Opening	0-10N·m(0-102kgf·cm)
170-032-970	HG-TQJ100-B	Closing	0-10N·m(0-102kgf·cm)

INSTALLATION PROCEDURE

1.Remove the covers by screw driver.

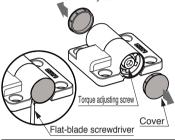


2. Fix hinges with the screws.

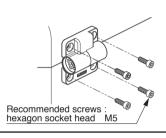


3. Adjust the torque of hinges to work torque effectively.

Please adjust the torque by fixing the screw slotting. It prevents screw idles of torque adjustment screw.

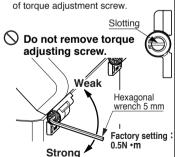

4. Put the covers on the hinges.

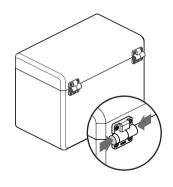

SUGATSUNE KOGYO CO.,LTD. Phone: +81 3 3866 2260 F a x : +81 3 3866 4447 E-mail: export@sugatsune.co.jp Website: www.sugatsune-intl.com SUGATSUNE KOGYO (UK) LTD. Phone: +44 118 9272 955 F a x : +44 118 9272 871 E-mail: sales@sugatsune.co.uk Website: www.sugatsune.co.uk SUGATSUNE AMERICA, INC. Phone: +1 310 329 6373 F a x: +1 310 329 0819 E-mail: sales@sugatsune.com Website: www.sugatsune.com SUGATSUNE SHANGHAI CO., LTD.
Phone: +86 21 3632 1858
F a x: +86 21 3632 1868
E-mail: lamp@sugatsune.com.cn