
LAMP KA-60 MULTI ANGLE STAY INSTALLATION MANUAL

ABOUT THE PRODUCT

- Stay to hold two pipes at 0°- 180° in 10° increments
- Completely locked when your hands are off the release button.

SPECIFICATIONS


Load Capacity	25 N•m
Applicable Pipe	φ19.1 × t1.2
Applicable Angle	0° - 180°

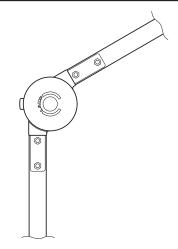

SAFETY PRECAUTIONS


- Do not disassemble the product.
- O Do not exceed the load capacity (25 N·m) as this may result in damage.

COMPONENT PARTS

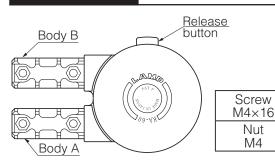


ASSEMBLY INSTRUCTIONS

 ■ Hole Processing on Pipe




Applicable Pipe: \$19.1 x t1.2 The holes should be located at 45° position from weld bead, if any.

Assembling Pipe

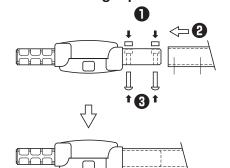

- Insert two nuts into the hexagonal holes on body A and body B.
- 2 Insert pipes into body A and body B, then align the holes on the pipes to the screw holes on body A and body B.
- 3 Fix the pipes with provided screws firmly.

HOW TO SET THE ANGLE

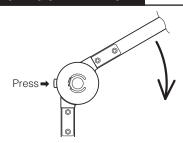

Press and hold release button just before the desired angle, then release the button and turn the stay until it is locked.

Ensure that the button is fully released.

19 locked positions from 0 to 180° in 10° increments.

SUGATSUNE KOGYO CO.,LTD

Tokyo, JAPAN
Phone: +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp Phone: +86 21 3632 1858

SUGATSUNE KOGYO (UK) LTD

Reading, UK Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

SUGATSUNE KOGYO INDIA PRIVATE LIMITED

SUGATSUNE SHANGHAI Co., LTD

E-mail:lamp@sugatsune.com.cn

Guangzhou, CHINA Phone: +86 20 6639 3552

E-mail:lamp@sugatsune.com.cn

SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Chicago, USA

Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

SUGATSUNE CANADA, INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

4

4