LAMP

KF111-A FOLDING DOOR SYSTEM

Installation Manual

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THIS PRODUCT

- This product is parts set for installation of folding door system for cabinets.
- The rails can be hidden by the overlay door panels.


FOR YOUR SAFE WORK AND CORRECT INSTALLATION

 \bigcirc

This symbol denotes prohibited actions.

Ō

This symbol denotes what must be done.

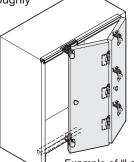


Example of "Lower - Roller - S"


Caution If these cautions are not followed, it may result in injury or damage.

- It is necessary to manufacture the cabinet with sufficient strength so it endures the weight of the door and impact shocks upon opening/closing the door. A frame with poor strength might result in improper and slower movement of the door. In the worst case, the door might drop down and cause injury.
- O Do not disassemble nor modify any parts than those described in this document.
- Make sure to follow the designated measurements and specifications as well as horizontal and verticals angles. Make sure that the cabinet is not warped, since it may affect the movement of the door.
- This (furniture fittings system) is a part for furniture fittings. After installation, make sure to test the finished product thoroughly to ensure that it is well-functioning and safe.
- Make sure to test the screws for slack at regular intervals (one month from first usage, half year and then one time every year is recommended).


INSTALLATION DRAWING (EXAMPLE)

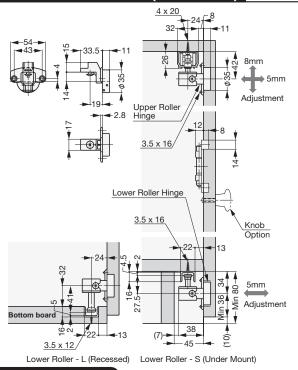

Door WidthMax. 450 mm per doorDoor HeightMax. 2400 mmDoor Thickness15-22 mmDoor WeightMax. 10 kg per doorCoverageMax. 19 mm
(with Sugatsune 230 hinge)

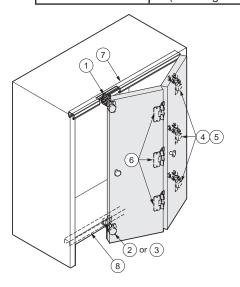

COMPONENT PARTS

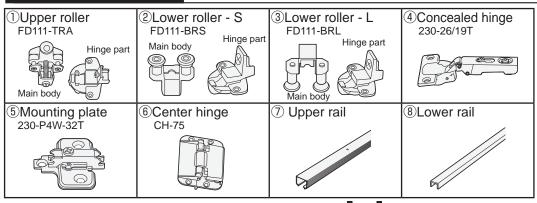


CABINET / DOOR WIDTH DIMENSIONS

Application	Hinged door at 90° open	Hinged door at 95° open	Other door at 87°open
2 Doors folding W = Width of inside cabinet W1 = Width of door ① and ④ W2 = Width of door ② and ③ W3 = Width of door ③' E = Coverage θ° = Opening angle at hinged door	$W_1 = \frac{W + 2E - 4.8}{2}$ $W_2 = W_1 + 3.2$	$W_1 = \frac{W + 2E - 7.8}{2}$ $W_2 = W_1 + 6.2$	$W_1 = \frac{W + 2E - 1.6}{2}$ $W_2 = W_1$
2 Doors folding and 1 swing open Hinge Door 3 Door 2 Door 1 W 1.6 W	$W_{3} = W_{1}$ $W_{1} = \frac{W + 2E - 6.4}{3}$ $W_{2} = W_{1} + 3.2$ $W_{3} = W_{2}$ $W_{1} = \frac{W + 2E - 9.6}{3}$ $W_{2} = W_{3} = W_{1} + 3.2$	$W_{3} = W_{1}$ $W_{1} = \frac{W + 2E - 9.4}{3}$ $W_{2} = W_{1} + 6.2$ $W_{3} = W_{2}$ $W_{1} = \frac{W + 2E - 15.6}{3}$ $W_{2} = W_{3} = W_{1} + 6.2$	$W_1 = \frac{W + 2E - 3.2}{3}$ $W_1 = W_2 = W_3$
2 Doors folding and 2 Doors folding Hinge Door 4 Door 3 Door 2 Door 1 Hinge W1 1.6 W2 1.6 W2 1.6 W1	$W_1 = \frac{W + 2E - 11.2}{4}$ $W_2 = W_1 + 3.2$	$W_1 = \frac{W + 2E - 17.2}{4}$ $W_2 = W_1 + 6.2$	$W_1 = \frac{W + 2E - 4.8}{4}$ $W_1 = W_2$

DOOR PROCESS DIMENSION

The drawing describes the right handed opening type. The left-handed opening type is a mirror image.

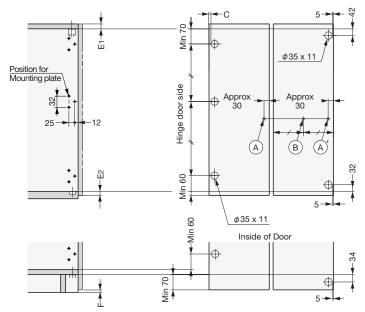

E₁ = Coverage (top)

E₂ = Coverage (bottom)

F = Gap between door bottom and floor (10mm)

Required Parts

Door Height	Concealed hinge4 Mounting plate5 (pcs)	Center hinge 6 (pcs)
900 mm	2	2
1600 mm	3	2
2000 mm	4	3
2400 mm	5	4

Coverage at hinge door side	C - Dimension
19 mm	5 mm
18 mm	4(5) mm
17 mm	3(4) mm

() Showshinge adjustable range

Knob Installation (Sold separately)

Recommended knob mounthing position A for opening & A' for closing the door. Install one knob at B position is also applicable for both opening & closing.

INSTALLATIOIN PROCEDURE

1 Cutting rails


Cut Upper rail & Lower rail to the required length.

Length = W - 1.5

Remove any dirt or aluminum chips from the rail as they would cause noise during operation.

2 Installing upper rail

Insert Upper roller to Upper rail before mounting.

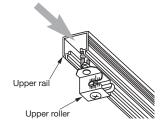


When installing the rails, ensure that upper rail and lower rail are parallel.




Installing concealed hinges, upper roller Install Concealed hinge for Pivot side door.

Install the hinge of Sliding guide for moving door.

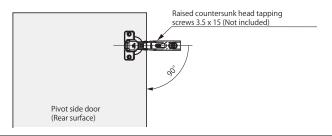


▲ Installing center hinges

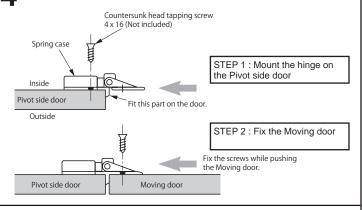


5 Installing knob

As for the position of the knob, please refer to "Door Process Dimensions" on page 2 and "How to operate the knob" on page 4.

6 Separating door panels

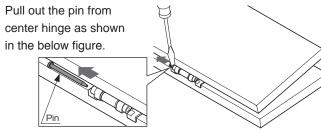


7 Fixing the mounting plates for Pivot side

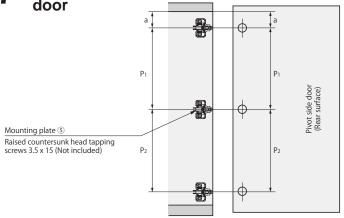


A Hanging the doors


Put a support of suitable height under the doors, clip on the hinges on the door to the mounting plates on the cabinet.

Door adjustment

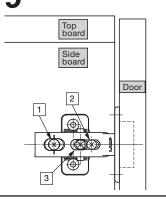

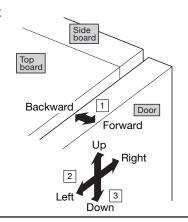


1 nstalling Upper roller

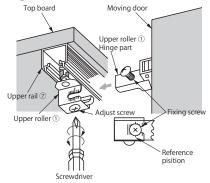


- Insert Hinge part in the socket part of Upper roller, while adjusting the height.
- (2) Tighten the fixing screw temporarily at the reference position.


11 Installing Lower roller

Under mount

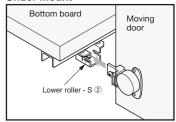

 
- (1) Insert Lower roller in the Lower rail.
- (2) Insert Hinge part in the socket part of Lower roller.
- (3) Tighten the fixing screw temporarily at the reference position.

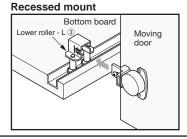




12 Assembling door panels

  Couple the hinge parts as shown in the right figure, then insert the hinge pin from above.





13 Checking the door movement

Open and close the door for several time and check if the door moves smoothly. Then re-tighten the fixing screws of all parts.



Periodically check if all of the screws are not loose. If the looseness is found, tighten it.




ADJUSTMENT OF THE INCLINED DOOR


When the door is inclined a lot like the right illustration, adjust the door by the adjustment screws on the concealed hinges. Do not try to adjust it by the screws on the sliding guide.

There are three ways of adjustment as below..


- \(\)\) Reduce the upper gap by the top and middle hinges.
- (2) Reduce the upper gap by the top hinge and increase the lower gap by the bottom hinge.
- (3) Increase the lower gap by the bottom hinge.

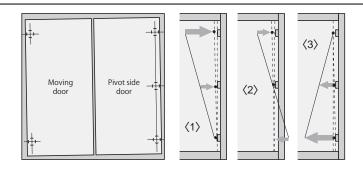

SUGGESTIONS FOR DOORS IN EQUAL WIDTH

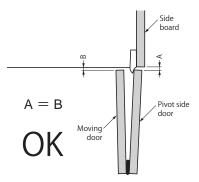


Adjust the fore-and-aft position of the concealed hinges so that the both A and B gaps are the same.

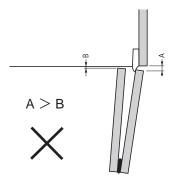

If "A" is bigger than "B", the closing action would not be smootht. Re-adjust the gaps as below.

- 1. Loosen all fore-and-aft-adjustment screws on the concealed hinges, and reduce the gap A, then re-tighten the
- 2. If "A" is still bigger "B", increase the gap B by ajusting the screws on the sliding guides.

HOW TO OPERATE THE KNOB

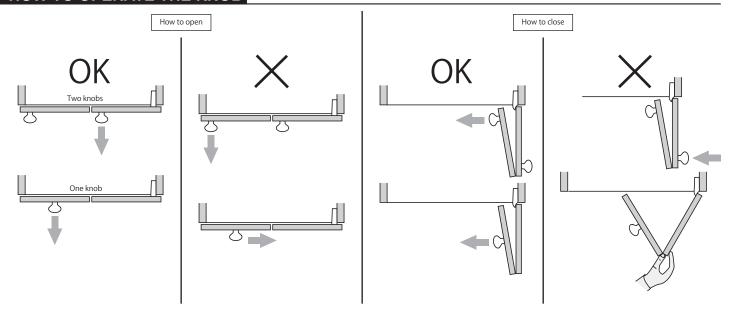

SUGATSUNE KOGYO CO.,LTD.

Phone: +81 3 3866 2260 F a x : +81 3 3866 4447

E-mail: export@sugatsune.co.jp

Website: www.sugatsune-intl.com

SUGATSUNE KOGYO (UK) LTD.

Phone: +44 118 9272 955

F a x: +44 118 9272 871 E-mail: sales@sugatsune.co.uk

Website: www.sugatsune.co.uk

SUGATSUNE AMERICA, INC.

Phone: +1 310 329 6373

F a x: +1 310 329 0819

E-mail: sales@sugatsune.com Website: www.sugatsune.com

SUGATSUNE SHANGHAI CO., LTD.

Phone: +86 21 3632 1858

F a x: +86 21 3632 1868 E-mail: lamp@sugatsune.com.cn Website: www.sugatsune.com.cn