



LAMP® ステンレス鋼製 引戸面付カマ錠 HC・85SS 取付説明書

このたびは、弊社製品をお買い上げいただき誠に有難うございます。
 取り付け作業に当っては本書を良くお読みの上、正しく取り付けてご使用されますようお願いいたします。
 取付後は、お使いになる方が本書を保管してください。

⚠ 注意

- 加工、取り付けに当り、指定寸法を確実に守ってください。誤った取り付けは本来の動作を發揮できない恐れがあります。
- 取り付けに際し、扉の下がりのないよう行ってください。

■梱包内容 梱包物、数量に間違いがない事を確認してください。



本体：1個

取付ねじ



【本体用】 十字穴付丸皿
 木ねじ3.8×20：2本




【受座用】 十字穴付皿
 木ねじ3.5×20：3本

受座：1個


※受座は枠板への掘込み加工が必要となります。

■取付位置 1

本図は左取り付けを表わします。
 右仕様の場合は上下が逆となります。
 (表示寸法はmmです。)

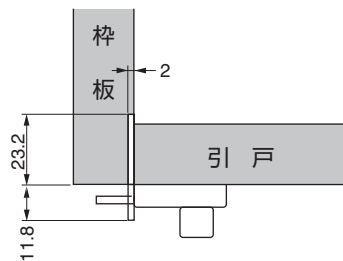

上面より見た図

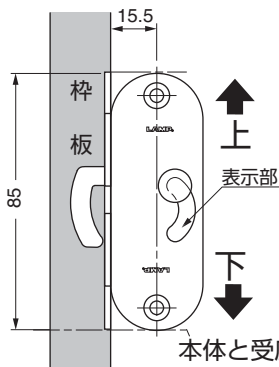


正面より見た図


本体と受座下面を揃える。

■取付位置 2 (枠板掘込みタイプ)

本図は左取り付けを表わします。
 右仕様の場合は上下が逆となります。
 (表示寸法はmmです。)

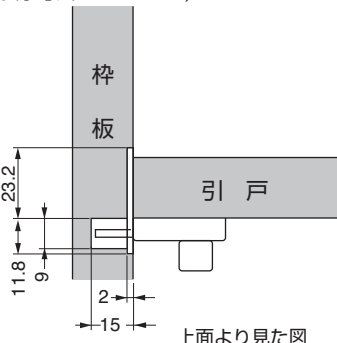

上面より見た図

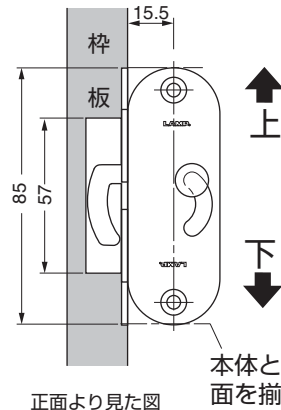

正面より見た図

本体と受座下面を揃える。

取付方法

手順1. 枠板への加工

取付仕様に合わせ、指定位置に加工を行います。(指定寸法は必ずお守りください。)

手順2. 引戸面付錠の取付


取付仕様に合わせ、指定位置に取り付けます。

手順3. 受座の取付

加工された位置に受座を合わせて固定します。

手順4. 動きの確認

引戸を閉じ、本体の施解錠操作を繰り返して確認してください。
 なお、表示部分が『青』色の時は解錠状態、『赤』色の時は施錠状態を示します。

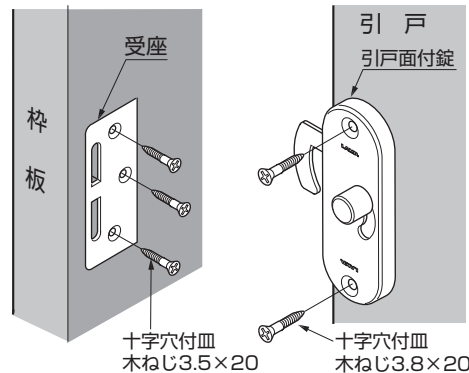

本製品に関するご質問・ご相談は、ご購入いただいた販売店、または下記の窓口へお願いいたします。

アーキテクトサポート室 電話番号 03 (3864) 1122
 受付時間 月～金 9:00～17:30 (年末・年始・夏季休暇等は除く)

FAX 03 (3863) 6875
 E-mail: support@sugatsune.co.jp
 東京都千代田区若本町2-6-10 〒101-0032

SUGATSUNE スガツネ工業
 LAMP®の商標登録商標


ISO 9001 (JISG384)・ISO 14001 (JSAE597) 認証取得
 〒410001 静岡県浜松市東区東山町1-1-1
<http://www.sugatsune.co.jp/>

The HC-85 is a positive hook lock for the sliding door. It features a simple hook to lock a sliding door and a color indicator for the lock and unlock positions. The HC-85 is made from SUS304 stainless steel, so that it can be used in damp or corrosive environments.


⚠ Read this mounting instruction carefully to secure appropriate operation.

All dimensions are by the metric system. (mm)

■ Parts



Counter Plate : 1pcs



Body : 1pcs




【Screws for body】
3.8×20 : 2 pcs




【Screws for counter plate】
3.5×20 : 3 pcs

1) Surface Mounting

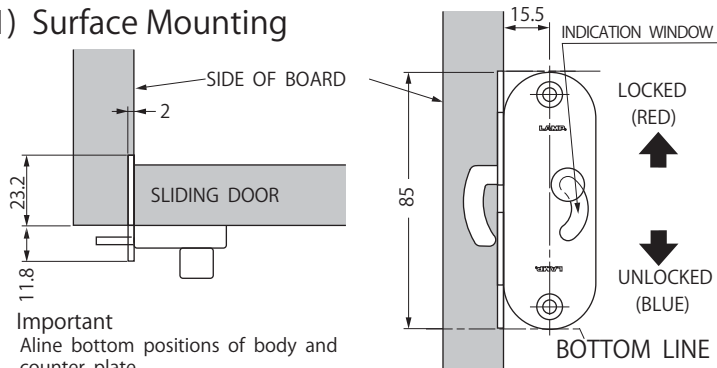

Important
Align bottom positions of body and counter plate.


2) Recess Mounting

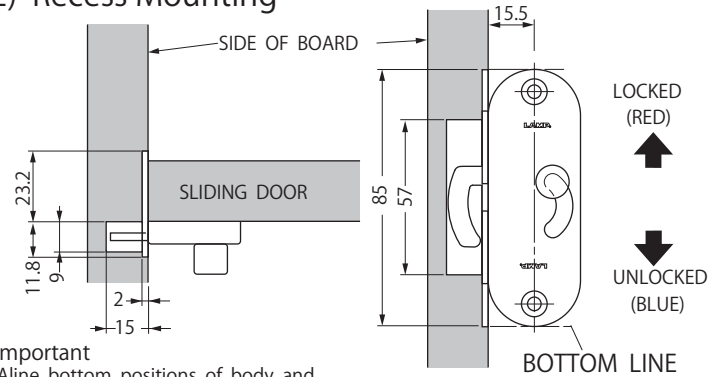

Important
Align bottom positions of body and counter plate.

INSTALLATION INSTRUCTION

Step 1.
Find the suitable height at the edge of the sliding door and attach the latch body to the door. Make sure that the lock position is UP.

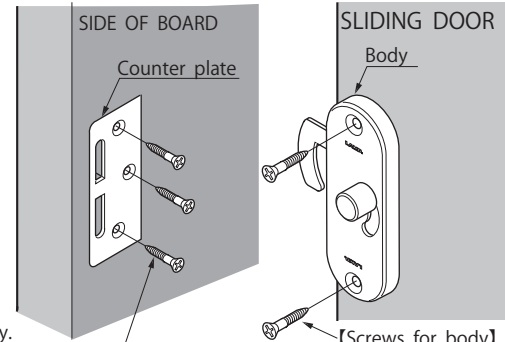

Step 2.
Depending on the type of mounting the sliding door has, please refer to the 1) & #2. Mount the plate at the exact same height as the latch body.

*If you have a recess mounting application, please cut out a section out of the slide board section for the latch hook before mounting the counter plate.